


# Sensor switch

## DS1-J Series



### Dimensions

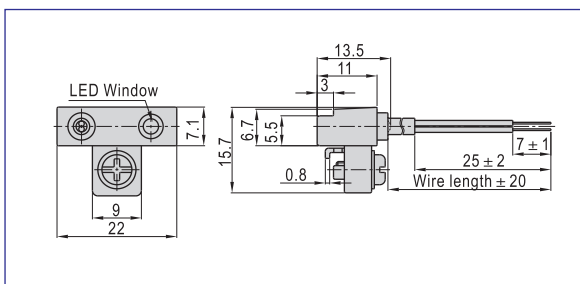

### Specification

Item/Type	DS1-J	DS1-JN	DS1-JP
Switch logic	Transistor without contact, Normally opened type		
Switch type	Two lines type	NPN type	PNP type
Operating voltage(V)	10~28V DC	5~30V DC	
Max. Switching current(mA)	50	200	
Switching rating(W)	Max. 1.4	Max. 6	
Current consumption	12(40)uA Max. @24V	15mA Max. @24V	
Voltage drop	2.65V Max. @50mA DC	0.5V Max. @200mA DC	
Cable	Φ 3.3,2C Black oil resistant PVC	Φ 3.3,3C Black oil resistant PVC	
Indicator	Red LED		
Leakage current	20(90)uA Max. @28V	0.01mA Max.	
Sensitivity(Gauss)	25~700	60~75	
Max. Frequency(Hz)	1000		
Shock(m/s <sup>2</sup> )	500		
Vibration(m/s <sup>2</sup> )	90		
Temperature range(°C)	-10~70		
Enclosure classification	IP67(NEMA6)		
Protection circuit	Power reverse polarity, surge suppression		

### Ordering code

DS1 J N 020			
<b>Number of sensor switch</b>		<b>Connecting way</b> ①	
DS1: Sensor switch		C08: M8 quick joint, length of wire is 150mm	
		C12: M12 quick joint, length of wire is 150mm	
		020: length of wire is 2m	
		030: length of wire is 3m	
		050: length of wire is 5m	
		100: length of wire is 10m	
<b>Specification of sensor switch</b>		<b>Model of sensor switch</b>	
Specification		Blank: two-line /normally opened	
Product Series		N: three-line NPN with no contact	
J: J type		(current flows in)/ normally opened	
SDA, TN, TWH, TWM, ACQ32~100		P: three-line PNP with no contact	
TWQ32~50, QCK32~63		(current flows out)/ normally opened	

① Note: The quick joint that is attached at the end of wire is three-needle-male joint-linear-rotary screw thread type. The female joint plug has to be ordered additionally. Please refer to P420 for the specific data.

### Mounting

Installation example	Installation method
	<p>No additional accessories are necessary for the sensor switch of DS1-J (N, P) series. It can be directly fixed onto the cylinder, which is convenient and fast.</p> <p>1. Loosen the clamping screw, slide the inductive switch to the slot and adjust it to the proper position. Tighten the clamping screw and then tighten the anti-loose screw cap to fix.</p>



Sensor switch